




INSTALLATION INSTRUCTIONS




P21520

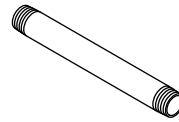

P21521

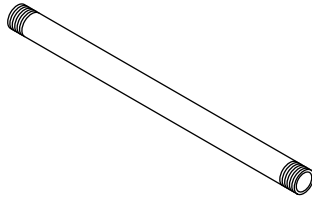

P21522

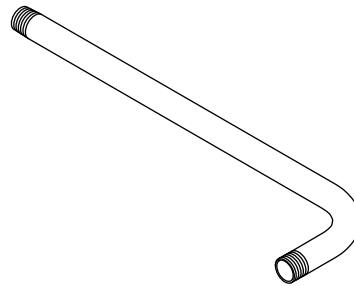

P21523

INSTALLATION INSTRUCTIONS


THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.


IMPORTANT INFORMATION

- Observe all local plumbing and building codes.
- Shut off the main water supply.
- The appearance of your product may differ from what is shown in these instructions, however, the installation procedure is the same.
- KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

TOOLS AND MATERIALS

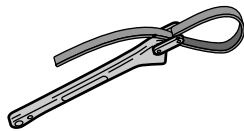


Strap Wrench



Sealant Tape

INSTALLATION INSTRUCTIONS

INSTALL THE SHOWER ARM

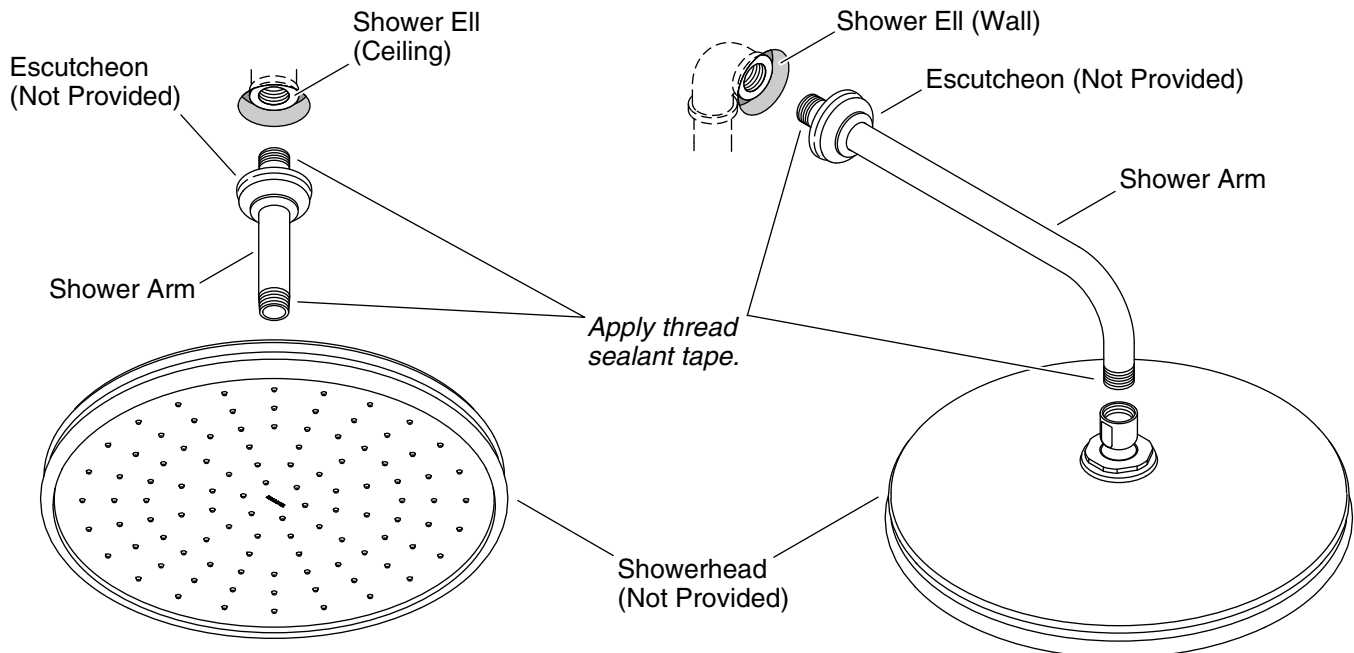

CAUTION: Risk of product damage. To avoid plugging the showerhead spray outlets, use thread sealant tape on the shower arm threads. Do not use thread sealant compound (pipe dope).

NOTE: The showerhead and escutcheon are not provided.

- Remove the temporary nipple from the shower ell.
- Slide the escutcheon onto the end of the shower arm that will be closest to the wall/ceiling.
- Apply thread sealant tape to the shower arm threads closest to the wall/ceiling.
- Thread the showerarm into the shower ell.
- Carefully tighten the shower arm with a clean strap wrench.
- With the showerhead off, turn on the water to flush out the system.
- Check connections for leaks. Repair as needed.
- Turn off the water.
- Install the showerhead according to the showerhead manufacturer's instructions.